

DASH LIGHT USER MANUAL

OPERATION



1. Attach suction cups onto the dash light.



2. Use a pointy object to push button for pattern change.

3. Loosen screw to adjust the angle of lighting.

FLASH PATTERN

PUSH BUTTON

- push once for next flash pattern
- push quickly 3 times for reset to FP# 0

FP#	Flash Pattern		
1	Random (default)	11	Double (all)
2	Single (split)	12	Quad (all)
3	Double (split)	13	Quint (all)
4	Quad (split)	14	Mega (all)
5	Quint (split)	15	Ultra (all)
6	Mega (split)	16	Single-Quad (all)
7	Ultra (split)	17	Single H/L (all)
8	Single-Quad (split)	18	Steady 2 (california)
9	Single H/L (split)	19	Steady 4 (all)
10	Single (all)		

*SPLIT=side by side alternating *ALL=all LEDs on

NOTE: This unit may NOT be factory set at FP# 0

